


Sensor positioning

- Recommended ActiveAhead sensor position.
- ⊘ For optimal sensor operation, do not place near these areas.

Note! Avoid sensor's exposure to direct sunlight.




Helvar ActiveAhead®
www.helvar.com/activeahead

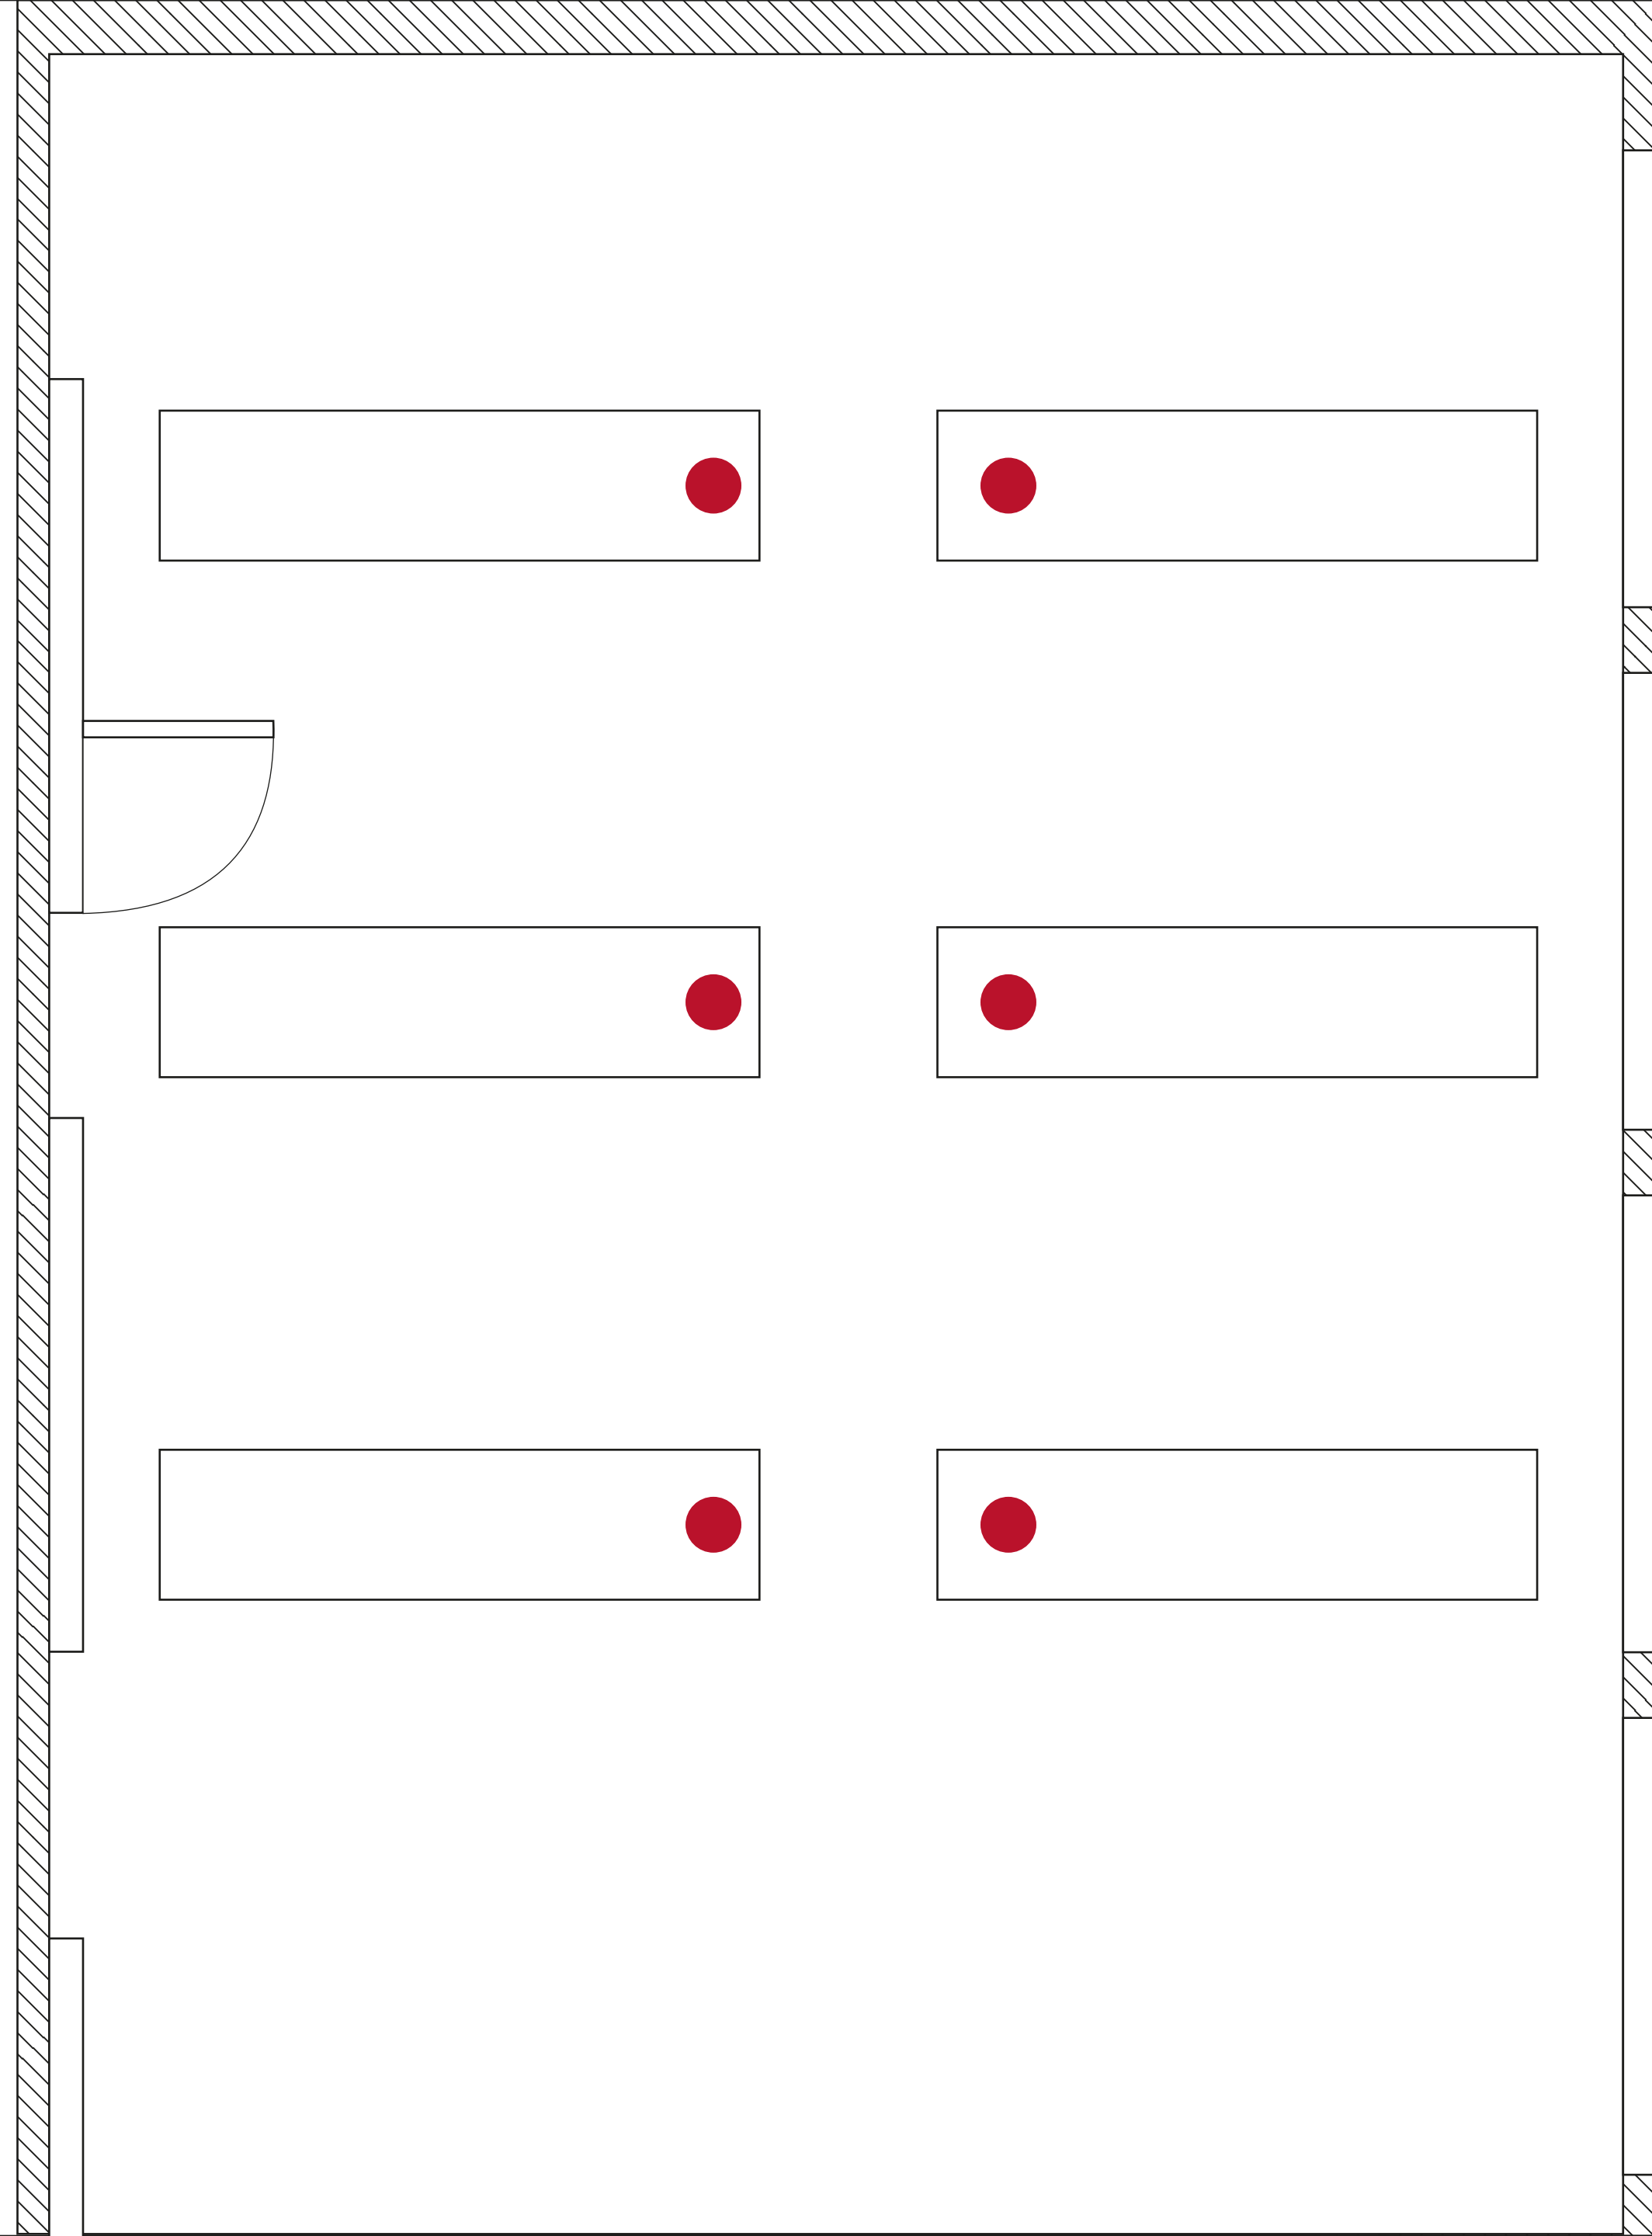

Sensor positioning
● Recommended ActiveAhead sensor position



Helvar ActiveAhead®
www.helvar.com/activeahead

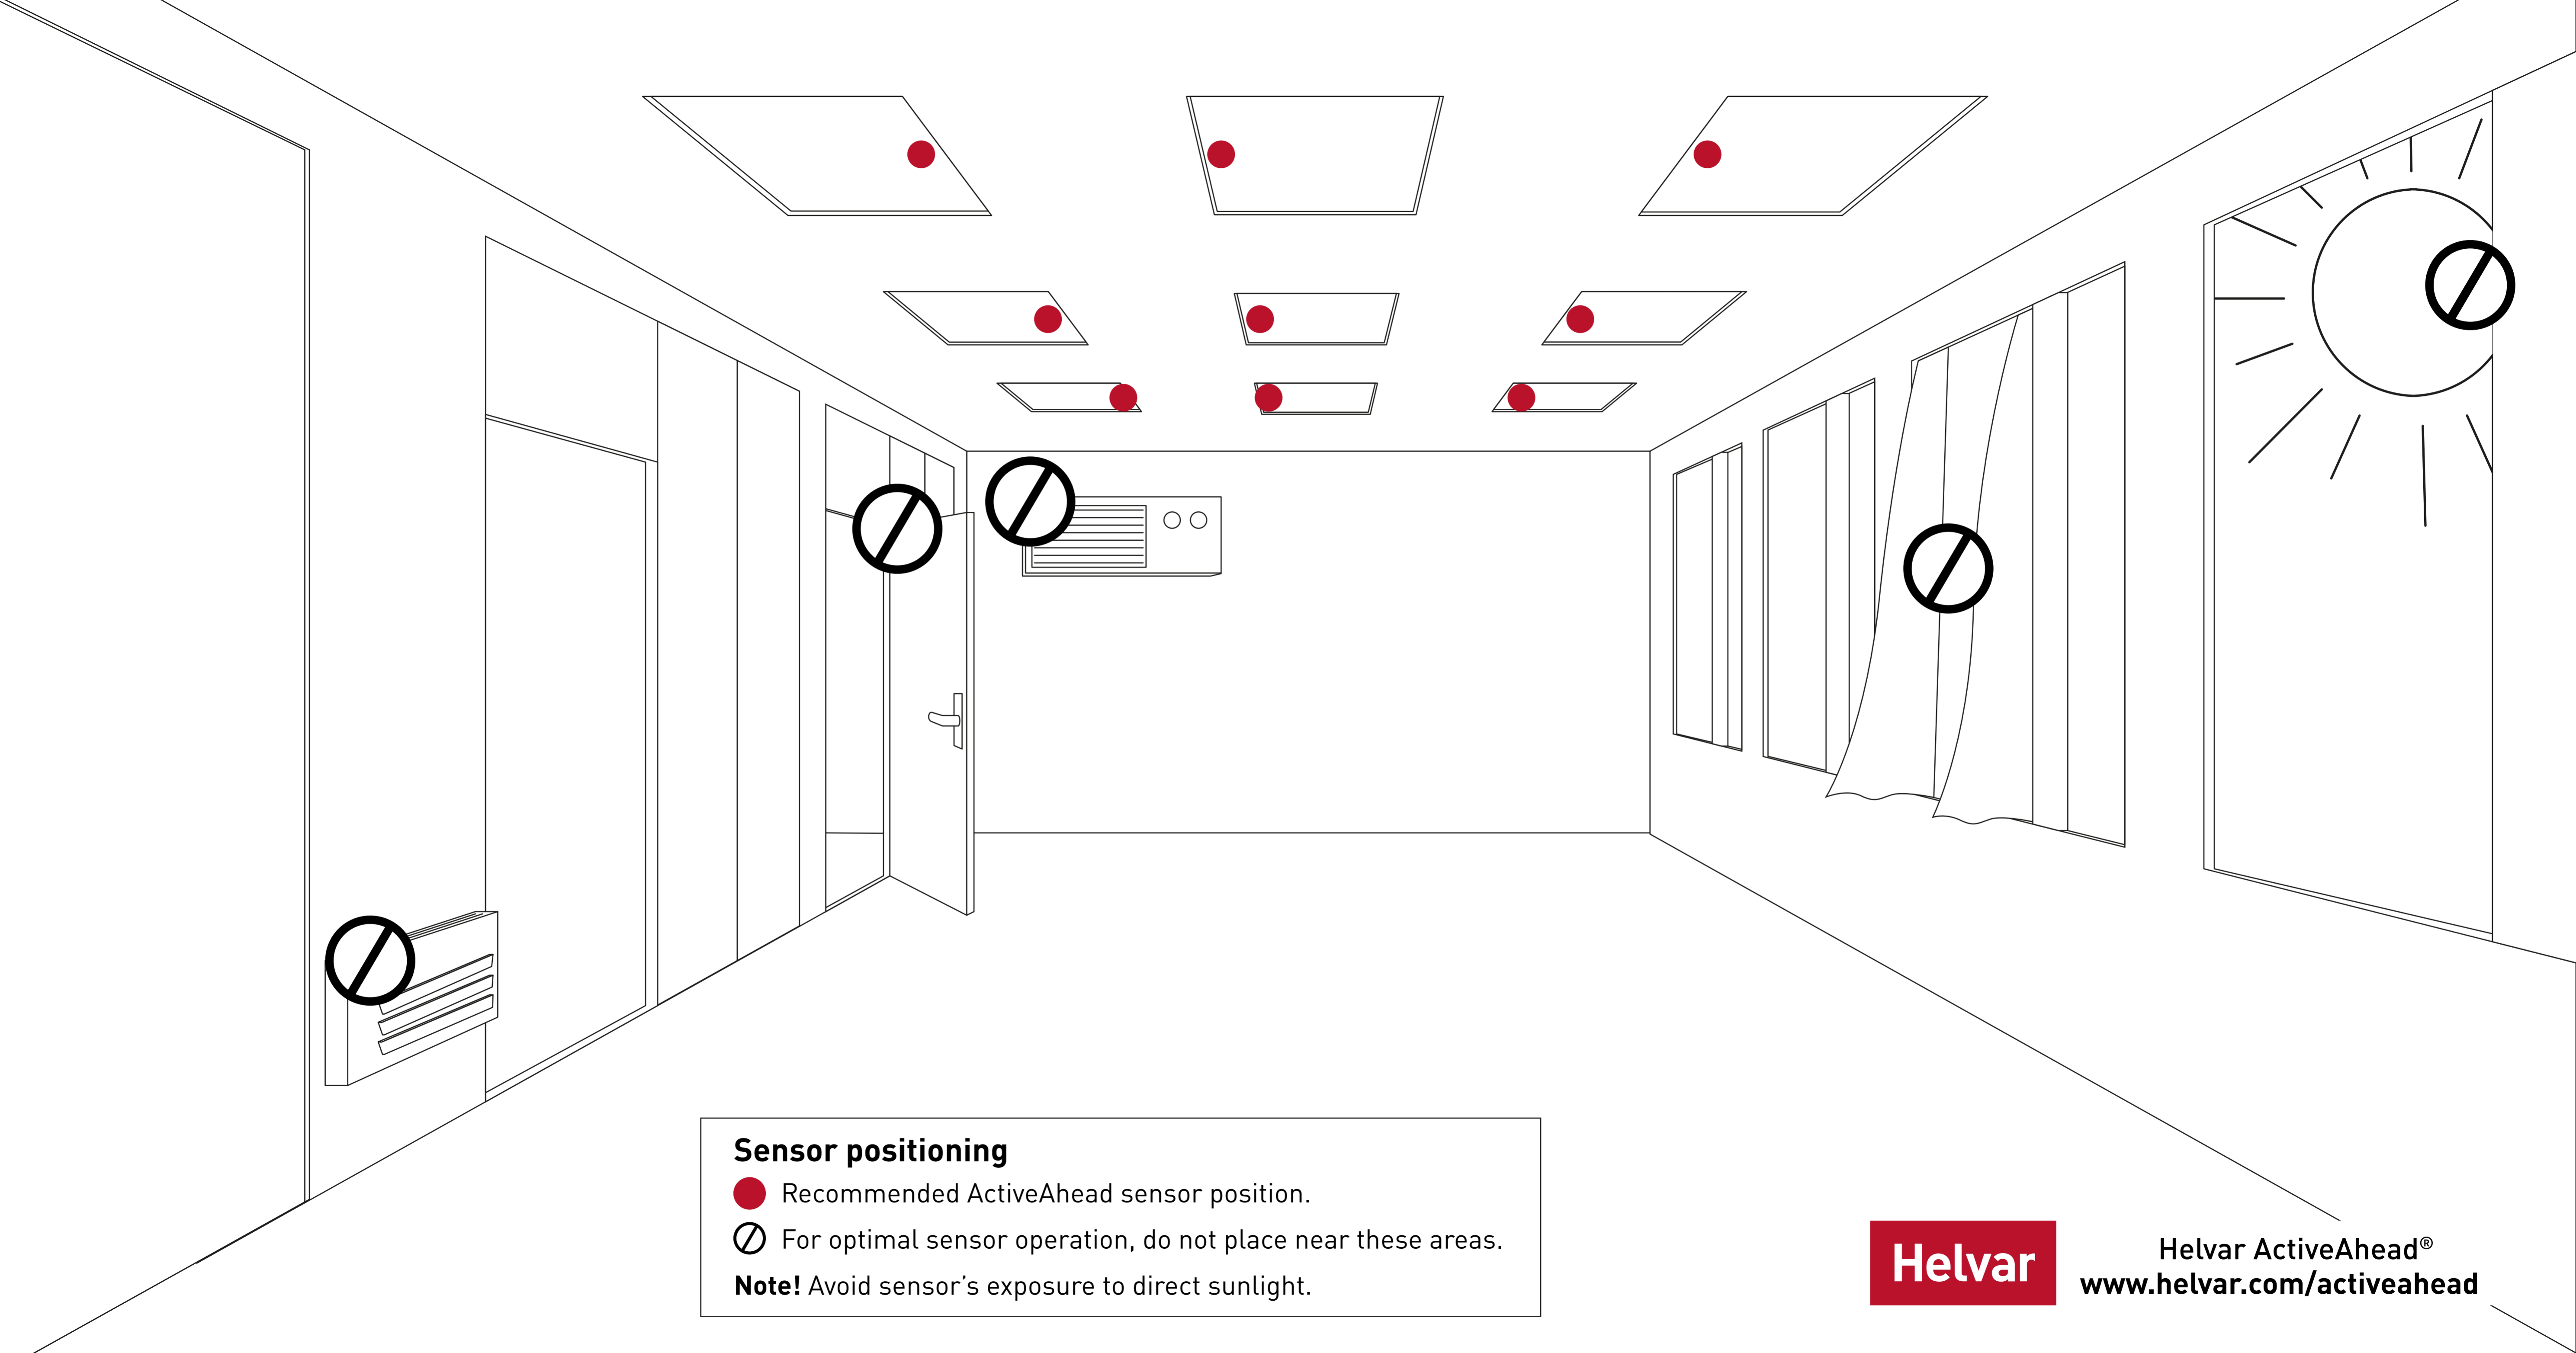


Sensor positioning

- Recommended ActiveAhead sensor position.
- ⊘ For optimal sensor operation, do not place near these areas.

Note! Avoid sensor's exposure to direct sunlight.



Helvar ActiveAhead®
www.helvar.com/activeahead

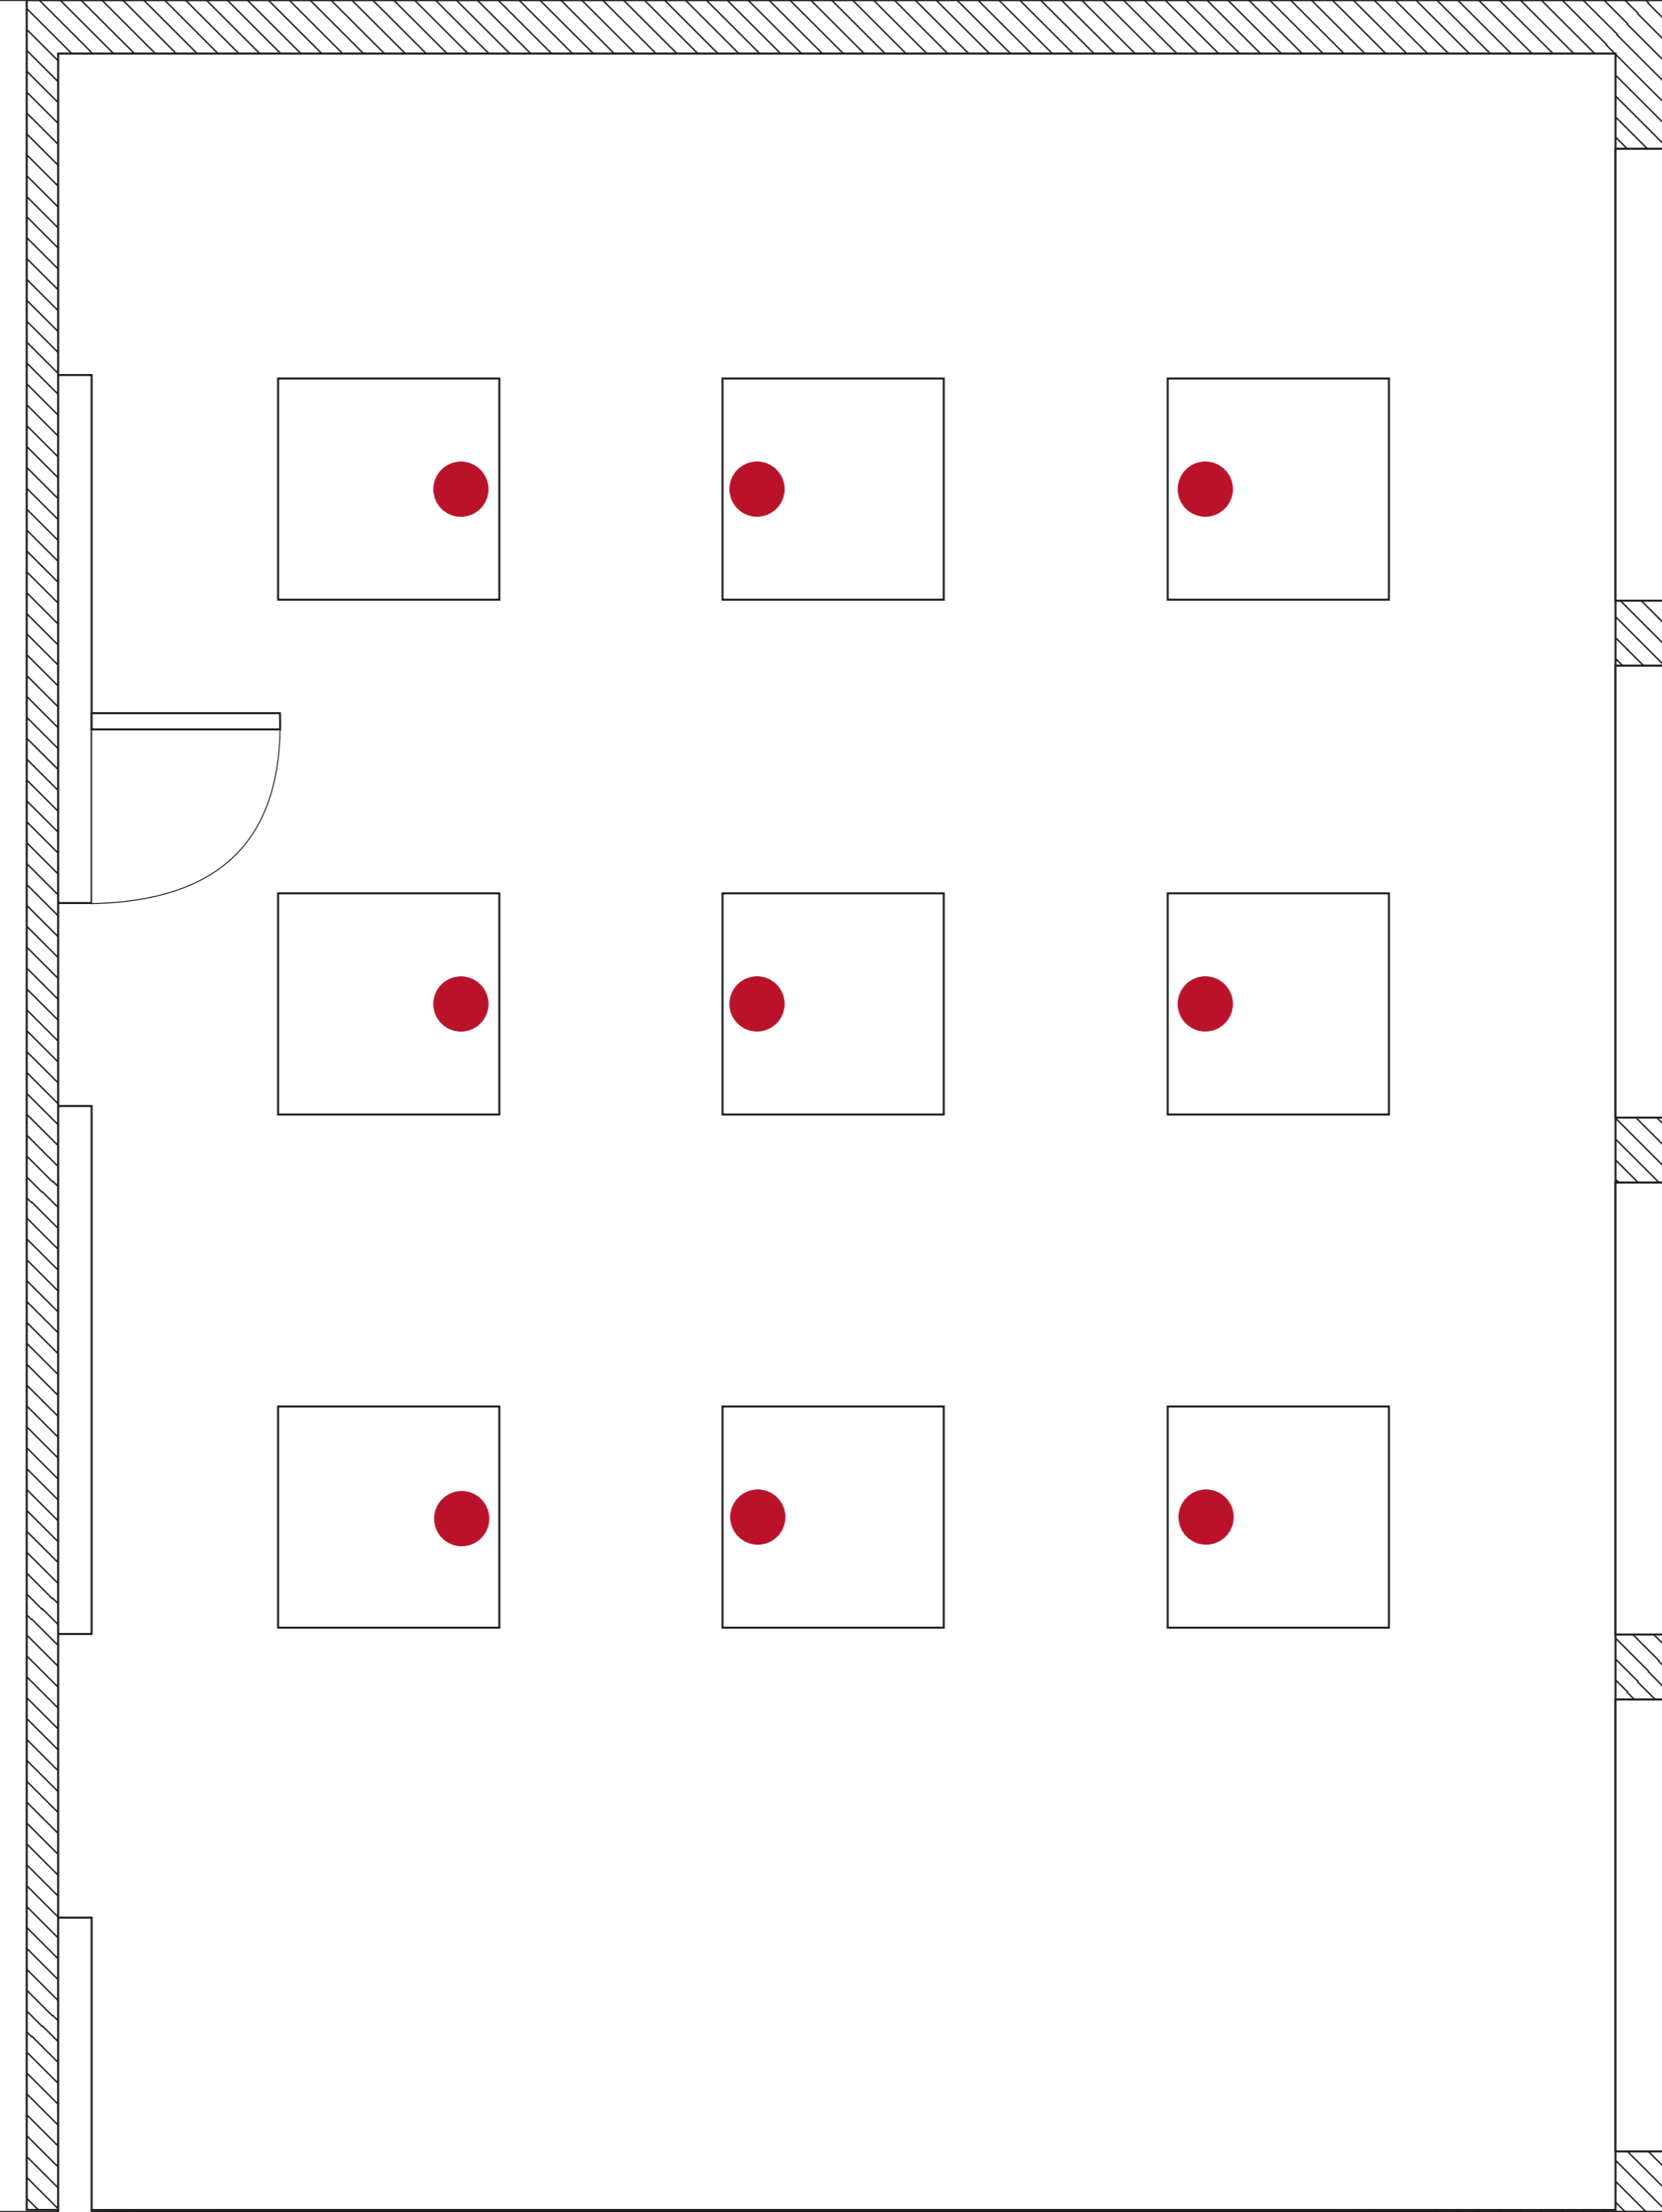

Sensor positioning
● Recommended ActiveAhead sensor position



Helvar ActiveAhead®
www.helvar.com/activeahead