



### **Table of Contents**

Features & Benefits
Solution Overview
Choosing your Setup
Overview of an Office Space
Open Plan
Corridor
Meeting room
Retail
Warehouse

# **Lighting Controls**

### Features & Benefits



#### **Intensity and Dimming**

Light output levels can be set according to the specification.



#### **Daylight Harvesting**

Lights are dimmed to enable energy savings when daylight is available.



#### Colour Temperature

Adjust colour temperature to have the desired atmosphere and mood.



#### Out-of-the-box operation

Lights start working the moment they are powered on and can be tuned later if necessary.





#### Presence detection

Lights are dimmed automatically based on the movement detections.



#### **Automatic Lighting Control**

Lighting adapts automatically and continuously to the actual space usage.



#### Wireless Wall Panels

Manual control with battery-free wall panels.



#### Groups

Luminaires can be grouped together, and group member level can be selected to support energy savings and comfort.



#### Scenes

Predefined lighting scenes enable illumination based on lighting needs or situational requirements.



#### Personal Lighting Control

Space user can tune the light above the workstation using their mobile phone.




#### Corridor hold

Keep lights on in a space while another space is in use for safety and comfort.



### **SOLUTION** OVERVIEW

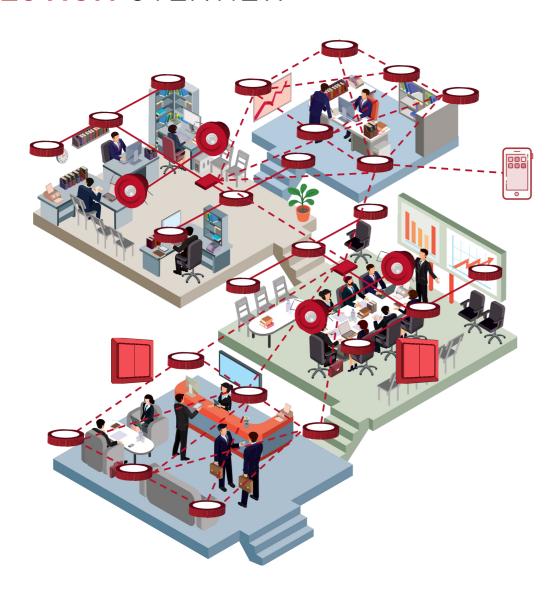


Nodes in the Helvar ActiveAhead system communicate wirelessly using a BLE Mesh network. These Nodes can be built into luminaires offering a really simple installation. These can also be in the form of ActiveAhead Node Advanced, which allows to connect through local wiring DALI devices to the ActiveAhead system.

Based on the needs of the space your installation can use a combination of wireless luminaires and Node Advanced with standard DALI luminaires and system sensors. You may for example freely group different kinds of Nodes and add wireless wall panels to those groups where needed. Possible configuration is done with an easy-to-use mobile app.

### CHOOSING YOUR SETUP


Choosing the right setup for your project is easy. Based on the space and luminaire types, select the Node and the corresponding suitable LED driver. When needed pick the sensor and a possible holder for it. For spaces such as meeting rooms, add the wireless control panel and you're good to go. If necessary, fine-tune the configuration on site using the ActiveAhead mobile app.

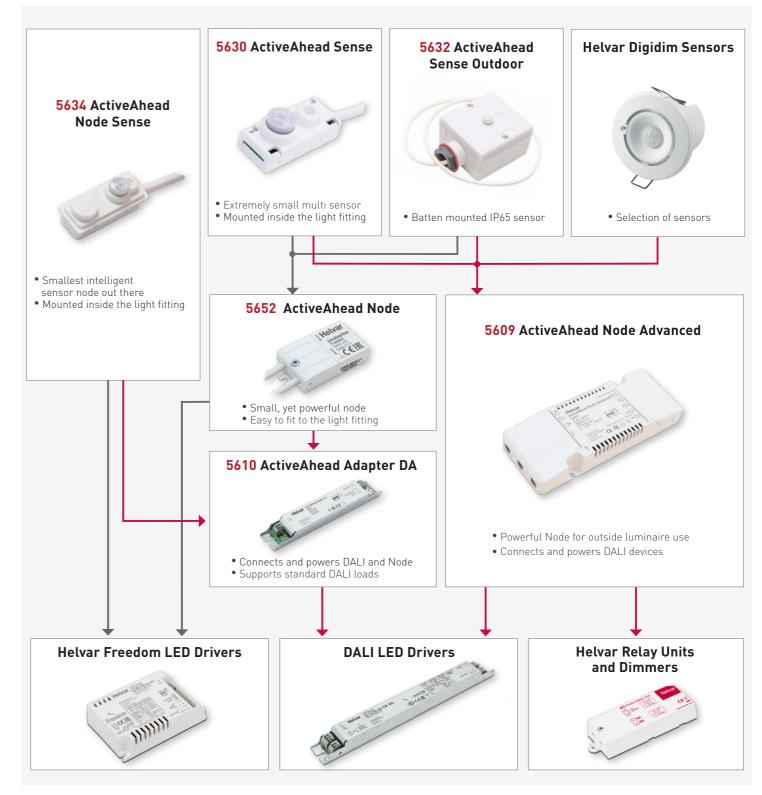

4 Helvar Node Advanced User Manual Discover more: www.helvar.com




# OVERALL VIEW OF AN OFFICE SPACE

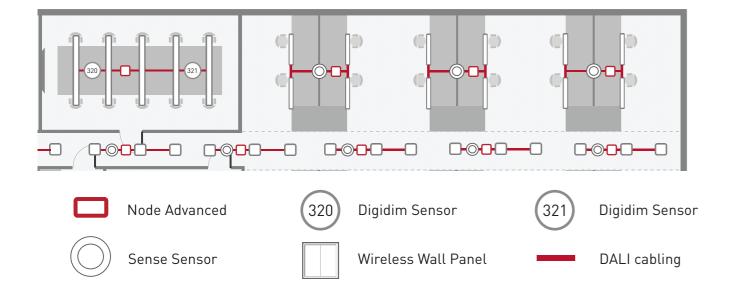

- Simple and fast to design, install and configure
- Cost efficient with great ROI
- Possible with standard DALI luminaires

# OPEN PLAN

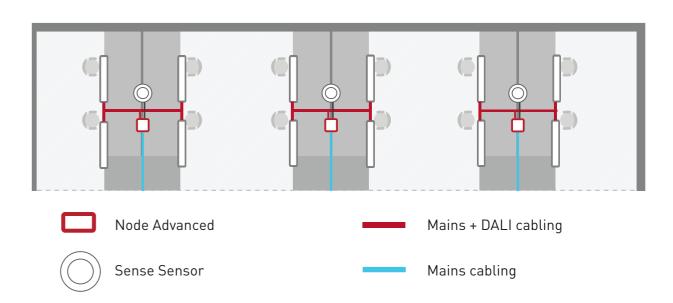

- Out-of-the-box operation with presence detection and daylight savings.
- Standard DALI luminaires.
- Add grouping and corridor hold for additional comfort.















Helvar Products



5609 ActiveAhead Node Advanced




5630 ActiveAhead Sense



5692 ActiveAhead Sense Circular Holder



# CORRIDOR

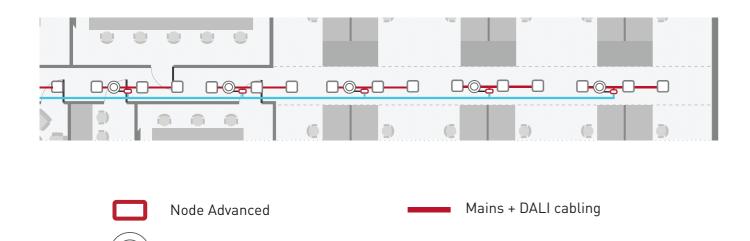

- Out-of-the-box operation with presence detection and daylight savings
- Standard DALI luminaires
- Add grouping and corridor hold for additional comfort.





Sense Sensor







Mains cabling



### Helvar Products



5609 ActiveAhead Node Advanced




5630 ActiveAhead Sense



5692 ActiveAhead Sense Circular Holder

# MEETING ROOM

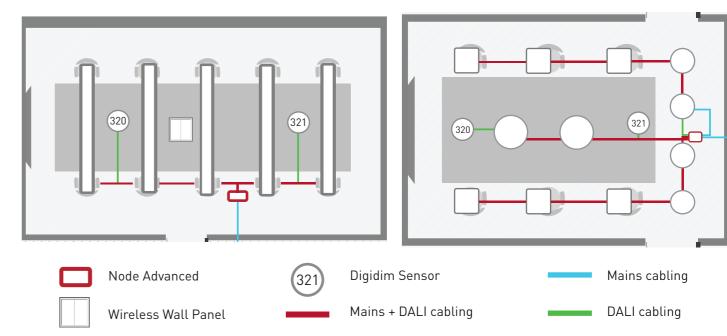

- Presence detection and daylight savings
- Standard DALI luminaires
- Add group and wireless wall panel for manual control
- Add corridor hold for additional comfort.













Helvar Products



5609 ActiveAhead Node Advanced



321 Multisensor




320 PIR Sensor



185W Wireless Control Panel




# RETAIL

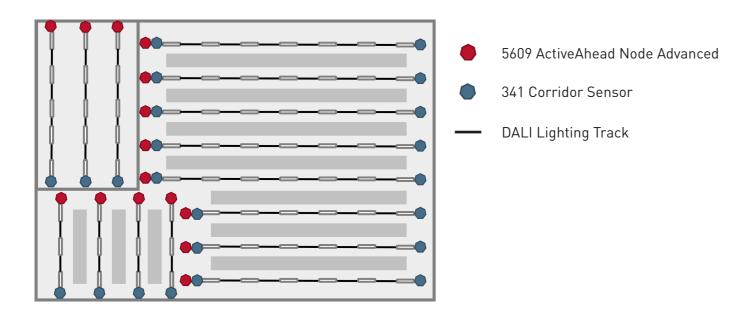

- Node Advanced powers and controls the DALI line on the track
- Presence detection
- Add groups for comfort

# WAREHOUSE

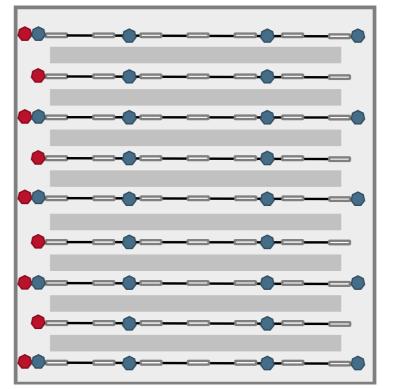

- 5609 ActiveAhead Node Advanced
- 322 High Bay Multisensor
- Mains + DALI cabling
- Node Advanced powers and controls the connected DALI line.
- Presence detection
- Add groups for comfort
- Note: Max. 2 A mains output from Node Advanced.













### **Helvar Products**



5609 ActiveAhead Node Advanced



341 Corridor Sensor

### Helvar Products



5609 ActiveAhead Node Advanced



322 High Bay Multisensor



We're based in Finland, Sweden and the UK - but we work with Partners all over the world.

**FINLAND** HELVAR OY AB, Keilaranta 5 FI-02150 Espoo Tel. +358 9 5654 1

SWEDEN Helvar AB Åsögatan 155 SE-11632 Stockholm Road Dartford, Kent, Tel. +46 8 545 239 70

UNITED KINGDOM Helvar Ltd Hawley Mill, Hawley DA2 7SY

Tel. +44 1322 617 200

See what's new at helvar.com

